MOUNTING INSTRUCTIONS



Air Intake V.2010


Clear: ref. 63750001 White: ref. 63750010

IMPORTANT: Read this notice before placing the Air intake on your helmet!

AIR INTAKES improve ventilation inside the helmet.

The Air intake can be used jointly with other aerodynamic devices (Top Gurney, Chin Bar Gurney, Spoiler) as per driver's choices and as per the particular needs of each type of open cockpit race car. For full range of aerodynamic devices consult: www.bellracing.info

ATTENTION: The AIR INTAKE is compatible with all helmet sizes.

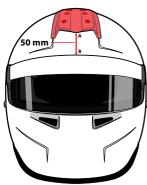



CORRECT POSITIONING

Place the Air intake at approximately **50 mm** from the visor (A to B), and center it over the aeration holes (C). To avoid lift, do not place the Air Intake higher than indicated above.

NOTE:

Aerodynamic devices are designed to brake and/or to bend in case of impact.

Do not reinforce it or do not make it more rigid.

Do not fix it on your helmet with glue.